



Firmware update


Press the “Gear” button in the right bottom corner of the Lasertag Configurator application window:

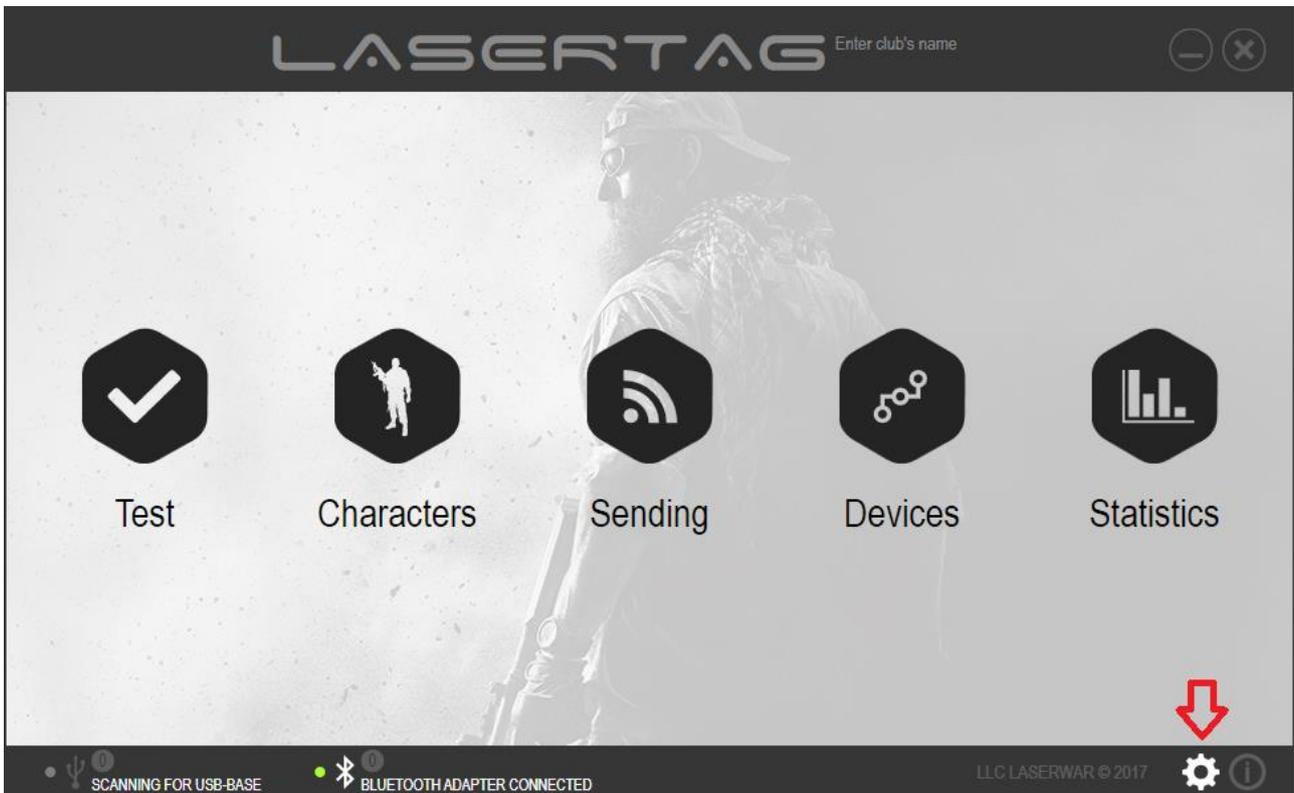


You will see the Options frame. Scroll down to see more options...

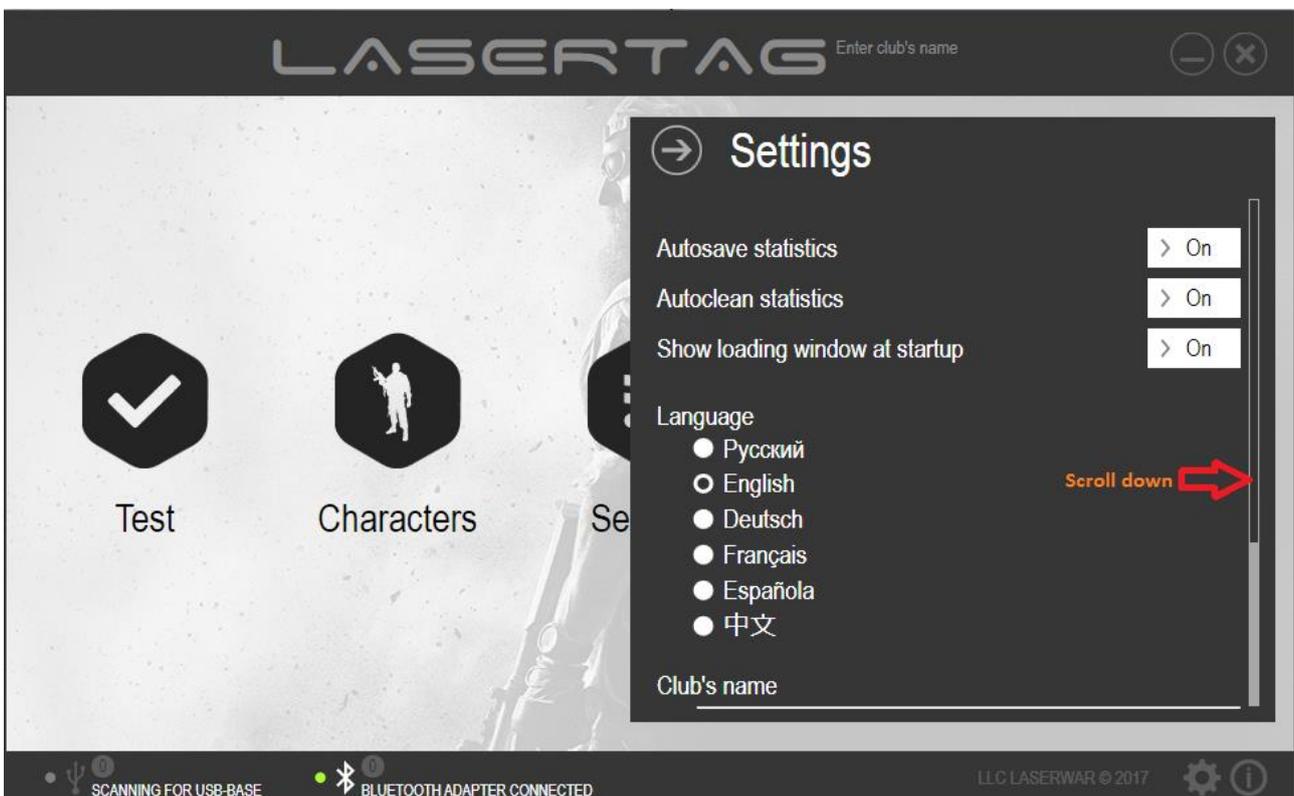

... and press the button "Update":

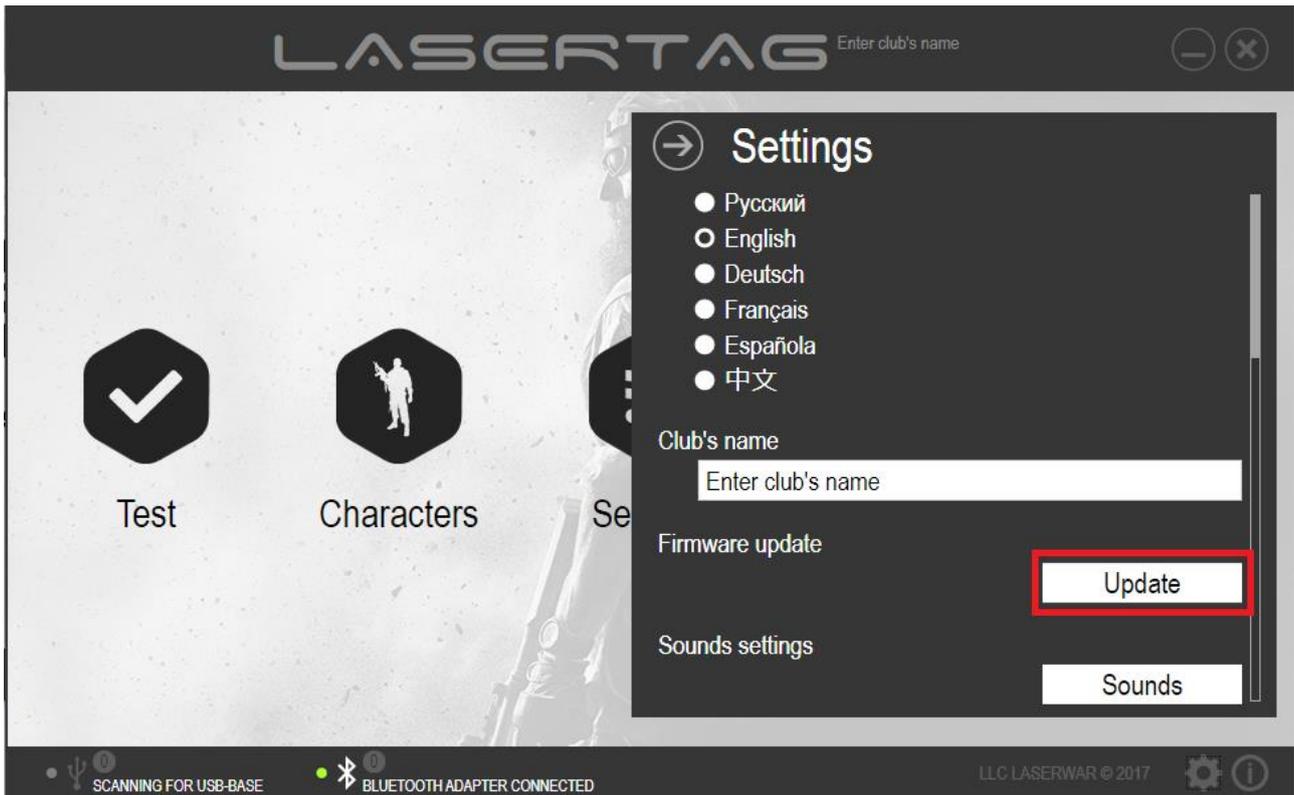

Select the firmware file on your PC. You may download this file from our website. Then press the button "Update". This button will be active when you select the firmware file.

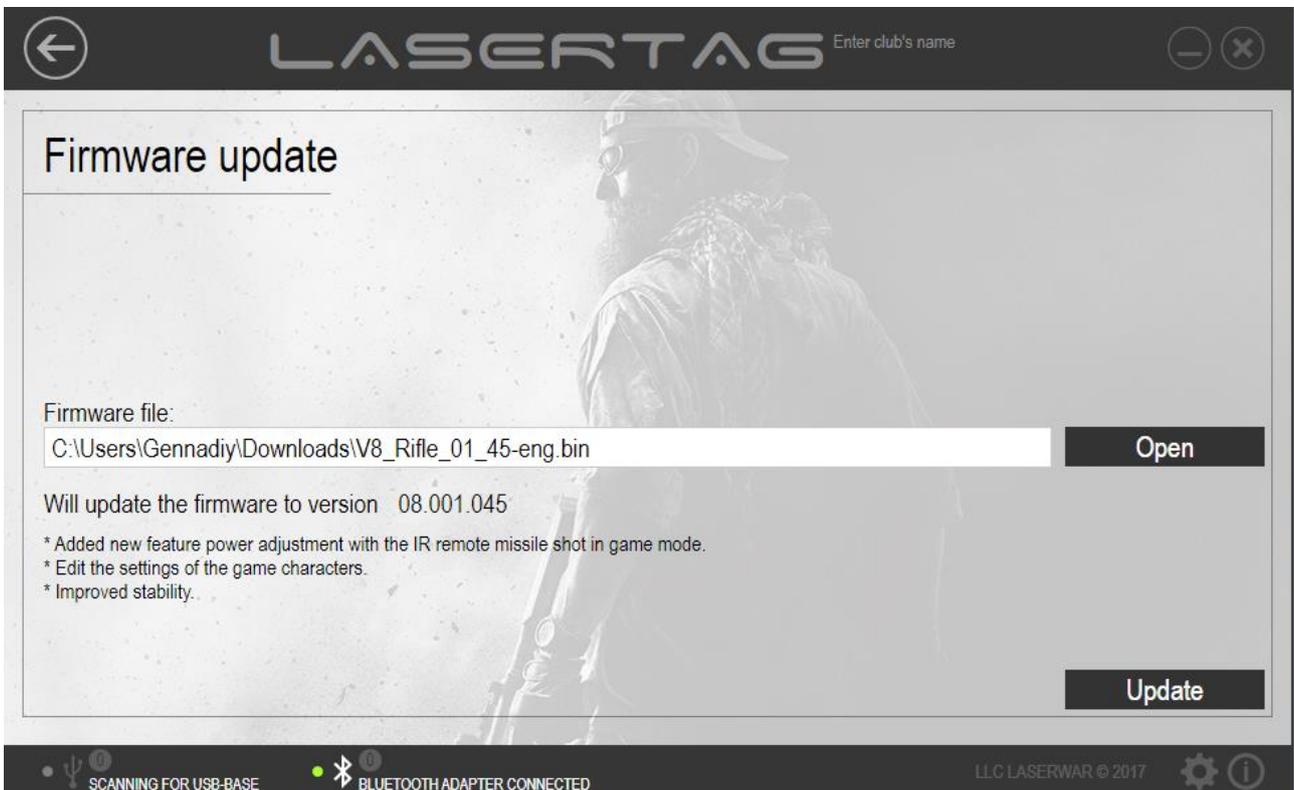

Then select all devices you need to change the firmware. Then press the button “Write”.



Firmware update will start. It may take a few minutes and then everything will done.